




Remove 7 x Screw



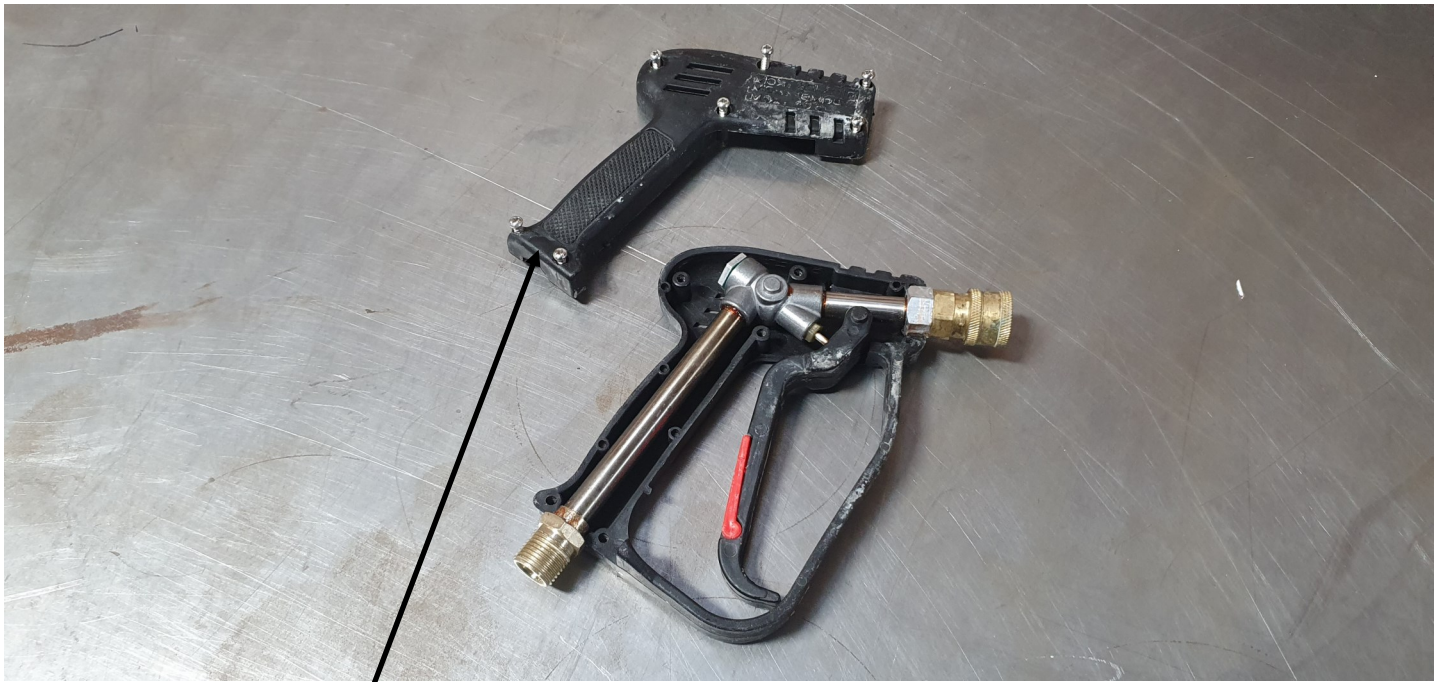


Remove outer cover



Remove internal components from plastic casing




Remove valve plug with 17mm spanner/socket

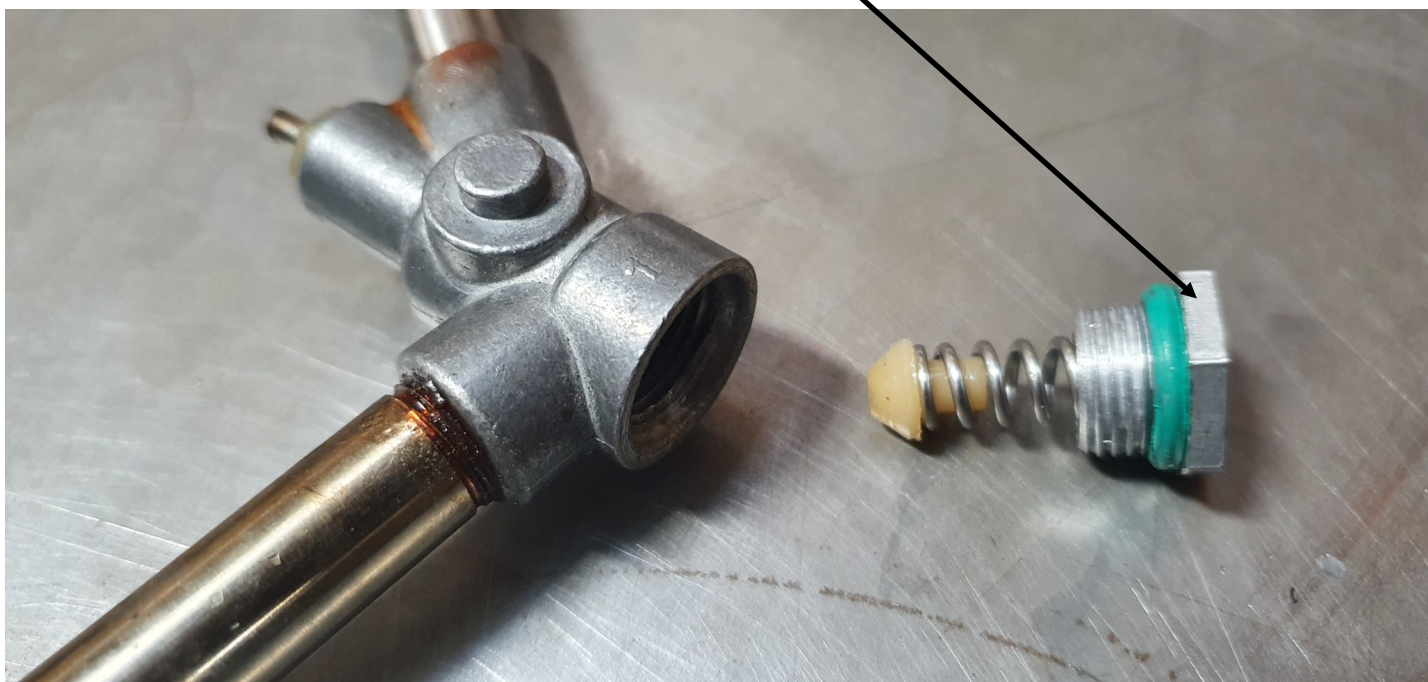

Clean-out interior of valve chamber



Ensure spring mounted valve seal is free from any build-up

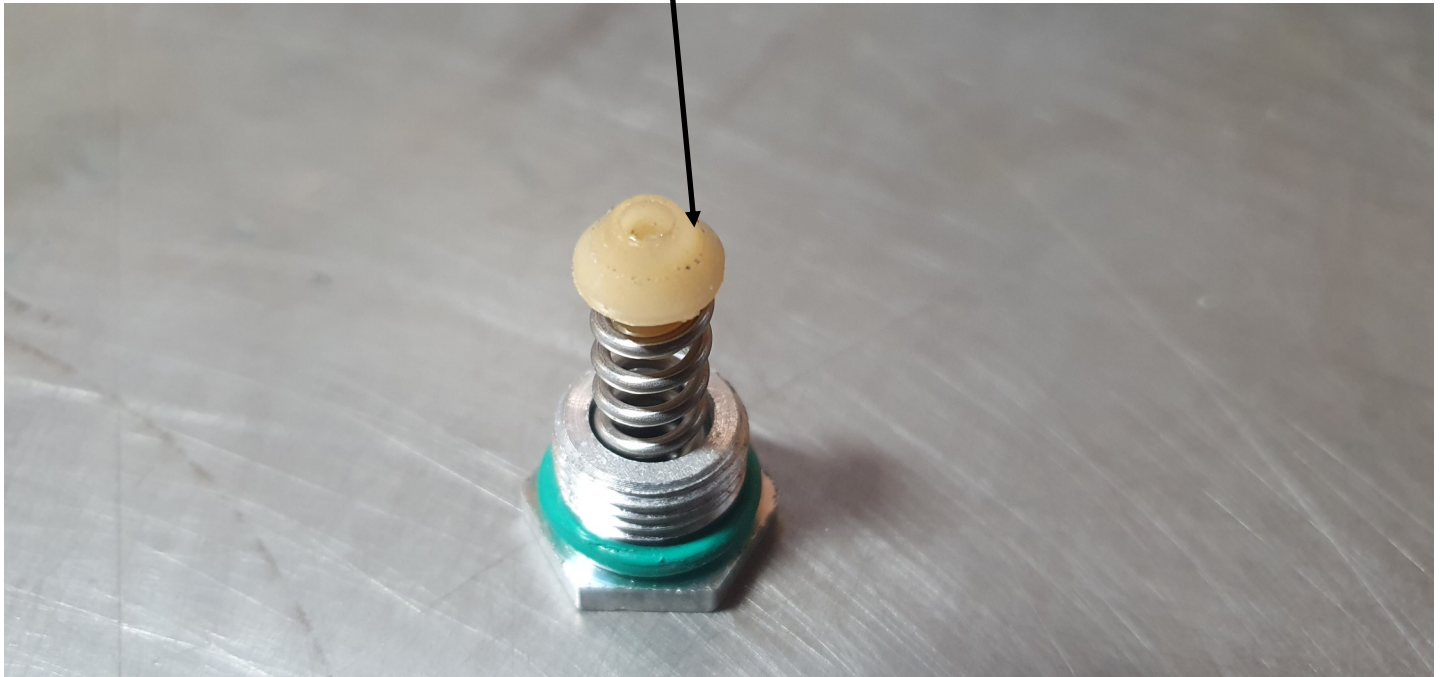

Re-assemble trigger handle once cleaned out.

